


4. AUXILIARY PARTS

A. Funnel type breather

Breather chamber of funnel type is located on the rear upper side of the upper crank-cage. Inside the chamber breather body is supported by a spring and back pressure is guided along the direction as shown in the figure separating oil to outside of crank-case. Here a check valve is fitted to avoid outside vapour to be sucked.

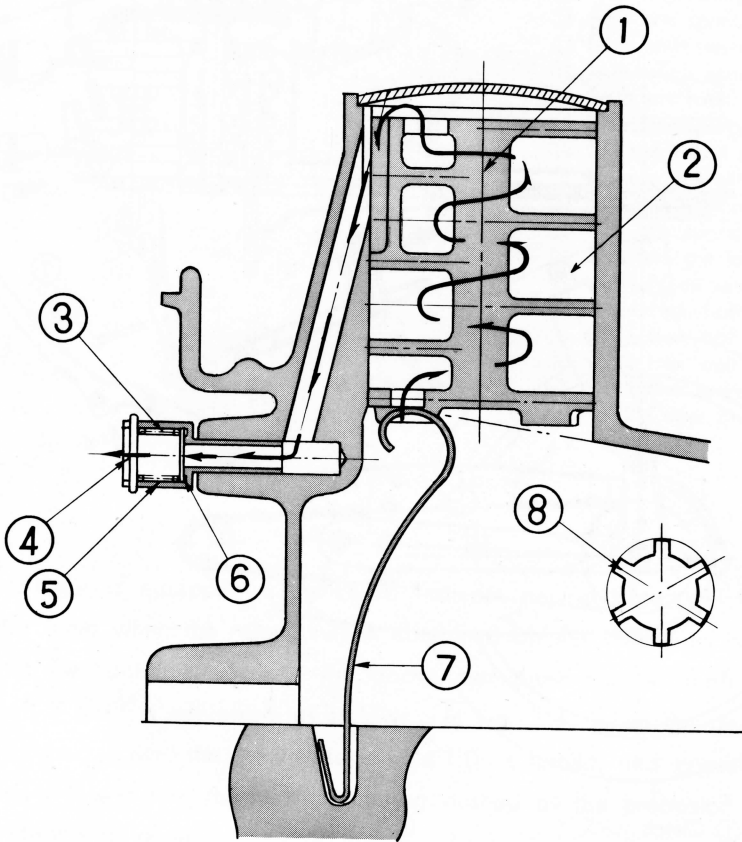

- | | |
|-------------------------|-------------------------------|
| ① Breather body | ⑤ Breather valve body |
| ② Breather chamber | ⑥ Breather valve |
| ③ Breather valve spring | ⑦ Breather support spring |
| ④ Cotter pin | ⑧ Breather valve (plain view) |

Fig. 4-1.

B. Kick starter mechanism

Kick spindle pawl for Model C72, 77 mates with the inside groove of low gear by pawl spring to rotate low gear. When not in kick, the head of pawl is pressed down by kick spindle metal bush so that low gear attains free state.